

# Sharp Pouch Products

Oxime type cure

JSIA F ☆☆☆☆

## Sharpie Multi-Purpose Neutral Silicone S

**Package**

●SK pouch 330ml 20/cardboard box

**Recommended primer**

●P15(for porous surface) P16(for non-porous surface)

**Modulus category**

●High

Tack free time/workable time(23°C)

●10min

**Color**



※JIS certificated product is packed in cartridges

code SRP1-03



High modulus type

JAIA F ☆☆☆☆

## Sharpie Modified Silicone M

**Package**

●SK pouch 330ml 20/cardboard box

**Recommended primer**

●P50(P32)

**Modulus category**

●High

Tack free time/workable time(23°C)

●60min

**Color**



code MSP1-02



Oxime type cure

JSIA F ☆☆☆☆

## Bath Seal

**Package**

●SK pouch 200g 10/cardboard box

**Recommended primer**

●P15(for porous surface) P16(for non-porous surface)

**Modulus category**

●High

Tack free time/workable time(23°C)

●10min

**Color**



code SRP1-04



Oxime type cure

JSIA F ☆☆☆☆

## Bath Seal

**Package**

●SK pouch 100g 10/cardboard box

**Recommended primer**

●P15(for porous surface) P16(for non-porous surface)

**Modulus category**

●High

Tack free time/workable time(23°C)

●10min

**Color**



code SRP1-04



Moisture cure type

## Sharpie Peelable Firefly Caulk

**Package**

●SK pouch 180ml 10/cardboard box

**Modulus category**

●Mid

Tack free time/workable time(23°C)

●45min

Color Fluorescence blue

code MSP1-13



Low modulus type

JAIA F ☆☆☆☆

## Exterior Wall Caulking

**Package**

●SK pouch 200ml 20/cardboard box

**Recommended primer**

●P50(P32)

**Modulus category**

●Low

Tack free time/workable time(23°C)

●60min

**Color**



code MSP1-21



■Headquarter・Factory  
〒592-8352 13-12 Chikkohamaderanishi-machi,  
Nishi-ku, Sakai City, Osaka

■Tokyo Sales Office  
〒135-0016 5-26-9 Toyo, Koto District, Tokyo

■Sunshine Chemical Technology  
(SHANGHAI) CO.,LTD.  
〒201-402 No.16-1Lane 2058DaYe Road Fengxian  
District Shanghai,China

■Osaka Sales Office  
〒592-0001 2-9-1 Takasago, Takaishi City, Osaka

■Global Center  
〒592-0001 3-44 Takasago, Takaishi City ,Osaka

■Sapporo Office  
〒003-0824 1-2-1, 4jyo Kikusuiotomomachi  
Shiraishi-ku Sapporo

<http://www.sharpchem.co.jp/english>

mail:info@sharpchem.co.jp

skype ID:sharpchem\_en  
(English)





# SK Pouch System

High Quality Japanese

## 1 How To Use



Squeeze the bottom of the SK pouch



Use a nozzle and make a hole on the head of pouch



Attach the nozzle



Cut the nozzle



Insert the SK pouch into an applicator



Close the cap of the applicator



Pull trigger and dispense Sealant



When completely used, pouch can be compressed and easily disposed

Cost Saving


Waste Reduction

Size Flexibility

Easy To Handle

## OEM is available


Our line of products:  
Packed Silicone, MS, PU, Acrylic materials  
from 100ml~500ml  
Empty pouches can also be purchased.  
Save storage space  
by purchasing pouches.

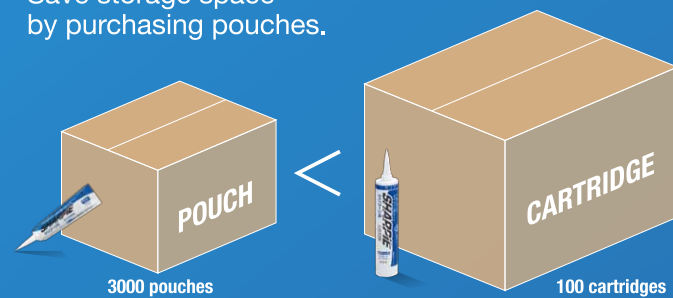

## Sizes

■ Volumes  
100ml / 200ml / 300ml / 400ml / 500ml

### ■ Dimensions

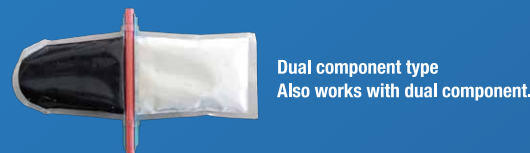

## Pouch Applicator



## International patents

